


Intelligent LED Driver (Constant Voltage)

- The housing is made of V0 flame-retardant PC material, sourced from SAMSUNG/COVESTRO.
- The clamshell design and screwless type for strain-relief. The design of dismountable end cap allows you to adjust the length of housing depending on your needs.
- Supports full-command NFC fast programming. Mobile app via NFC enables changing DMX address, dimming curve, brightness range and other parameters, realizing driver data interaction.
- Support the RDM remote Device Management Protocol.
- Supports DMX512/RDM, Push DIM and corridor light DIM.
- Supports deep dimming from 0-100%, with a minimum dimming level of 0.01%.
- It is equipped with a soft-start gradually brightening function, making the visual experience more comfortable for the human eye.
- Supports Over-the-Air (OTA) online firmware updates for devices
- Complies with the EU ERP Directive on energy efficiency, with no-load power consumption < 0.5W and network standby power consumption < 0.5W
- Innovative thermal management technology intelligently protects the life of the LED driver.
- Includes protections against overheating, overload, short circuit, and open circuit.
- Suitable for Class I/II/III indoor light fixtures.
- Designed for a service life exceeding 100,000 hours under normal operating conditions.
- 5-year warranty (Rubycon capacitor).



Flicker-Free
IEEE 1789
Achieve the exemption level

Dimmable:
1: 10000

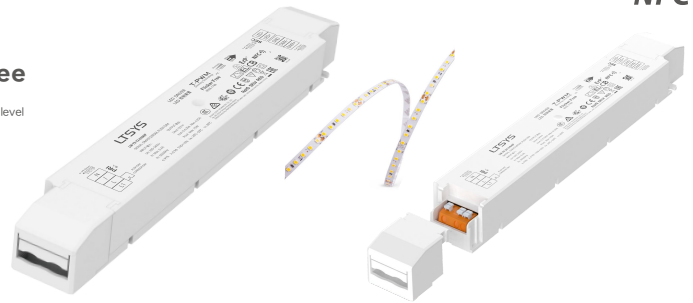


Technical Specs

Model	LM-75-24-G1M2F	LM-75-12-G1M2F			
FEATURES	Output Type	Constant Voltage			
	Dimming Interface	DMX512/RDM, PUSH DIM			
	Output Feature	Isolation			
	Protection Grade	IP20			
	Insulation Grade	Class II (Suitable for class I /II/III light fixtures)			
OUTPUT	Output Voltage	24V $\overline{=}$	12V $\overline{=}$		
	Output Voltage Range	24V \pm 0.5V $\overline{=}$	12V \pm 0.5V $\overline{=}$		
	Output Current	Max. 3.125A	Max. 6.25A		
	Output Power	Max. 75W			
	Output Power Range	0~75W			
	Strobe Level	High frequency exemption level			
	Dimming Range	0-100%, down to 0.01%			
	Overload Power Limitation	\geq 102%			
	Ripple	\leq 300mV	\leq 200mV		
	PWM Frequency	300-22000Hz			
INPUT	AC Voltage Range	220-240V~			
	DC Voltage Range	220-240V $\overline{=}$ (EMI needs to be evaluated after the luminaire is installed)			
	Frequency	50/60Hz			
	Input Current	Max. 0.4A/230V~			
	Power Factor	PF>0.98/230V~ (at full load)			
	THD	THD<10%@ 230V~ (at full load)			
	Efficiency (Typ.)	92%	91%		
	Standby Power Loss	< 0.5W			
	Inrush Current	Cold start 45A(Test twidth=300us tested under 50% Ipeak)/230V~			
	Anti Surge	L-N: 2KV			
Leakage Current	Max. 0.5mA				
ENVIRONMENT	Working Temperature	ta: -20 ~ 50°C tc: 80°C			
	Working Humidity	20 ~ 95%RH, non-condensing			
	Storage Temperature/Humidity	-40 ~ 80°C, 10~95%RH			
	Temperature Coefficient	\pm 0.03%/°C(0-50°C)			
	Vibration	10-500Hz, 2G 12min/1cycle, 72 min for X, Y and Z axes respectively			
PROTECTION	Overload Protection	Shut down the output when rated power \geq 102%, auto recovers			
	Overheat Protection	Intelligently adjust or turn off the output current if the PCB temperature \geq 110°C, and recover automatically			
	Short Circuit Protection	Enter hiccup mode if short circuit occurs, and recover automatically			
	Overvoltage Protection	Shut down the output when no-load voltage \geq 28V, and recover automatically	Shut down the output when no-load voltage \geq 16V, and recover automatically		
	Withstand Voltage	I/P-O/P: 3750V~			
SAFETY & EMC	Insulation Resistance	I/P-O/P: 100M Ω /500VDC/25°C/70%RH			
	SafetyStandards	CCC	China	GB19510.1, GB19510.14, GB19510.213	
		TUV	Germany	EN61347-1, EN61347-2-13, EN62493	
		CB	CB MEMBER STATES	IEC61347-1, IEC61347-2-13	
		CE	European Union	EN61347-1, EN61347-2-13, EN62384	
		EAC	Russia	IEC61347-1, IEC61347-2-13	
		RCM	Australia	AS 61347-1, AS 61347-2-13	
		ENEC	Europe	EN61347-1, EN61347-2-13, EN62384	
	EMC Emission	CCC	China	GB/T17743, GB17625.1	
		CE	European Union	EN55015, EN61000-3-2, EN61000-3-3, EN61547	
		EAC	Russia	IEC62493, IEC61547, EH55015	
		RCM	Australia	EN55015, EN61000-3-2, EN61000-3-3, EN61547	
		ErP	Power Consumption	Networked standby	< 0.5W(After shutdown by command)
				No-load power consumption	< 0.5W (when no luminaire is connected)
			Flicker/Stroboscopic Effect	IEEE1789	Meet IEEE 1789 standard/High frequency exemption level
			CIE SVM	PstLM \leq 1.0, SVM \leq 0.4	
DF	Phase factor		DF \geq 0.9		
OTHERS	Weight(N.W.)	290g \pm 10g			
	Dimensions	293*43*30mm(L*W*H)			

This driver is suitable for connecting to resistor-limited LED fixtures (e.g., LED strips). If connected to fixtures with built-in constant-current ICs, it may generate instantaneous surge currents dozens of times higher, triggering overload protection (hiccup-mode flickering). For such fixtures (e.g., MR16 bulbs, buried lights, wall washers, constant-current rigid strips), please specify during ordering to enable firmware reprogramming.


Product Size

Unit: mm

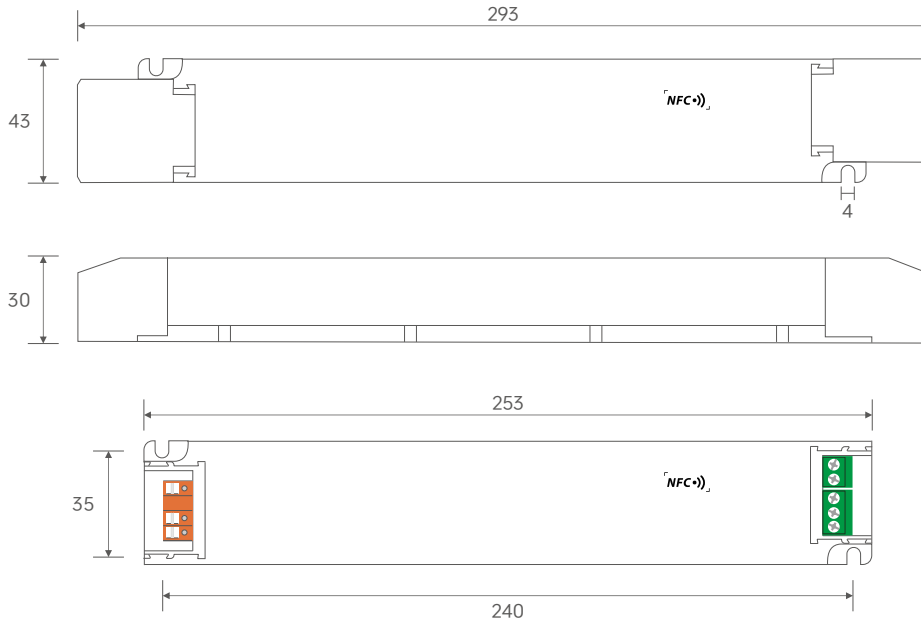


Wiring Diagram

DMX512/RDM Connection

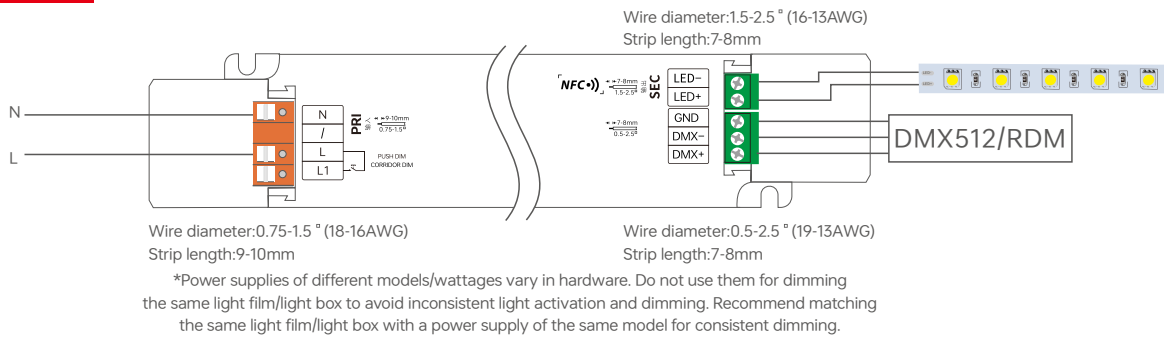

PUSH DIM Connection

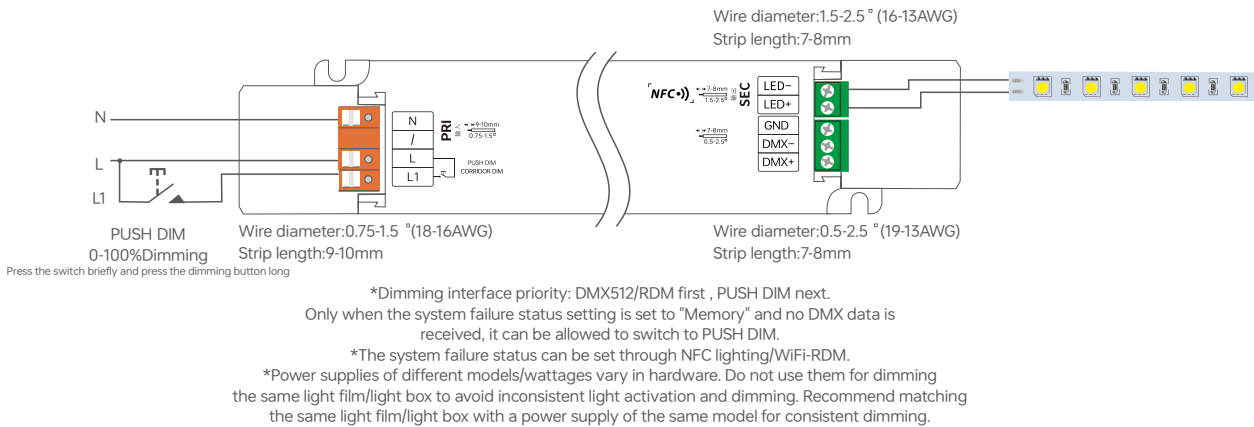

Switch to PUSH DIM Mode:

Method 1: If it has been switched to the corridor dimming mode, connect the wires according to the PUSH DIM wiring diagram. Press the switch briefly 5 times within 3 seconds of reset button, then press and hold it for 6 seconds, and then press it briefly 5 times within 3 seconds. The driver will automatically switch to the PUSH DIM dimming mode.

Method 2: If it is switched to the corridor mode, you can switch to the PUSH DIM dimming mode through the NFC Lighting app.

PUSH DIM



Reset Switch


Short press: on/off control.

Double-click: Not available.

Long press: Adjust the current brightness.

Dimming memory: When the light is switched on/off again, the light will resumes to the previously set brightness level.

Corridor Dimming Application

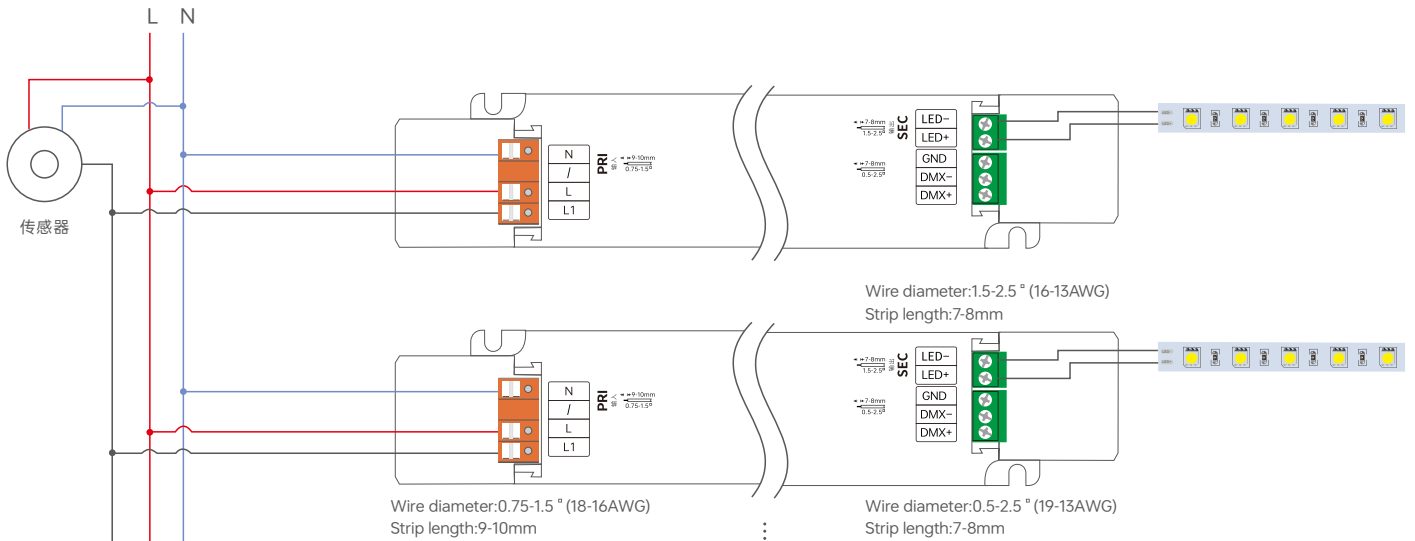

*The priority of the dimming interface is as follows: DMX512/RDM first, then the corridor light.
 *Switching to the corridor light mode is only allowed when the system failure state is set to "Memory" and no DMX data is received.
 *The system failure state can be set via NFC lighting/WiFi-RDM
 *Power supplies of different models/wattages vary in hardware. Do not use them for dimming the same light film/light box to avoid inconsistent light activation and dimming. Recommend matching the same light film/light box with a power supply of the same model for consistent dimming.

Switch to the corridor light mode


Method 1: Configure and switch the corridor light function via NFC, and the Push DIM function will be turned off.

Method 2: After connecting the wires according to the corridor dimming wiring diagram, keep moving within the effective sensing area for more than 2 minutes, and it will automatically switch to the corridor dimming mode with all lights on at full brightness.


Method 3: After connecting the wires according to the corridor dimming wiring diagram, first replace the sensor with a common switch, then turn on the common switch and keep it conducting for 2 minutes. The driver will automatically switch to the corridor dimming mode. After that, remove the common switch and replace it with the sensor again.

Note: During normal operation, it is recommended to set the hold-time of the motion sensor to the minimum. It is necessary to select a motion sensor with an AC switch.

Corridor Dimming: Working Process

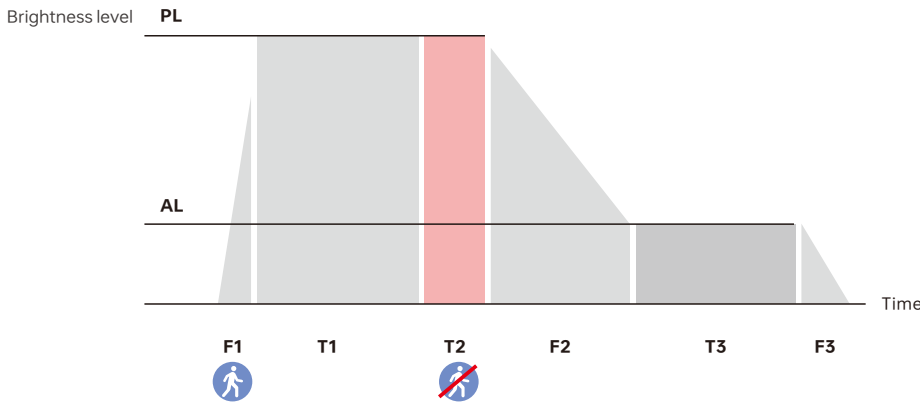


Name	Default	Setting Range
(F1) Gradual Entry Sensing Time	1 s	0-100 s
(PL) Sensing Brightness	255	0-255
(T1) Sensing Holding Time	Set through the sensor	
(T2) Delay Time	30 s	0 s, 5 s, 10 s, 20 s, 30 s, 45 s, 1 min, 2 min, 3 min, 5 min, 10 min, 20 min, 30 min
(F2) Gradual Exit Sensing Time	1 s	0-100 s
(AL) Standby Brightness	100	0-255
(T3) Sensing Standby Time	30 s	0 s, 5 s, 10 s, 20 s, 30 s, 45 s, 1 min, 2 mins, 3 mins, 5 mins, 10 mins, 20 mins, 30 mins, Permanent
(F3) Gradual Exit to Off Time	1 s	0-100 s

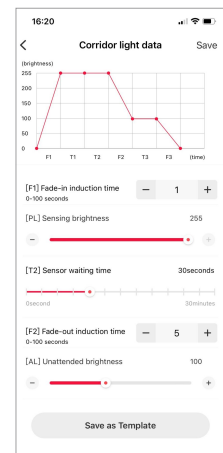

Note: *If the lamp needs to be on standby at a low brightness level, the [T3] Sensing Standby Time should be set to "Permanent".
 *The above parameters are set through the NFC lighting APP.

Use with RDM Editor

The DMX driver can work with a DMX address programmer that follows the standard RDM protocol. It is recommended to use LTECH RDM Programmer (Model: WiFi-RDM01), which can achieve more functions such as remote browsing and parameter setting. Wiring diagrams below:



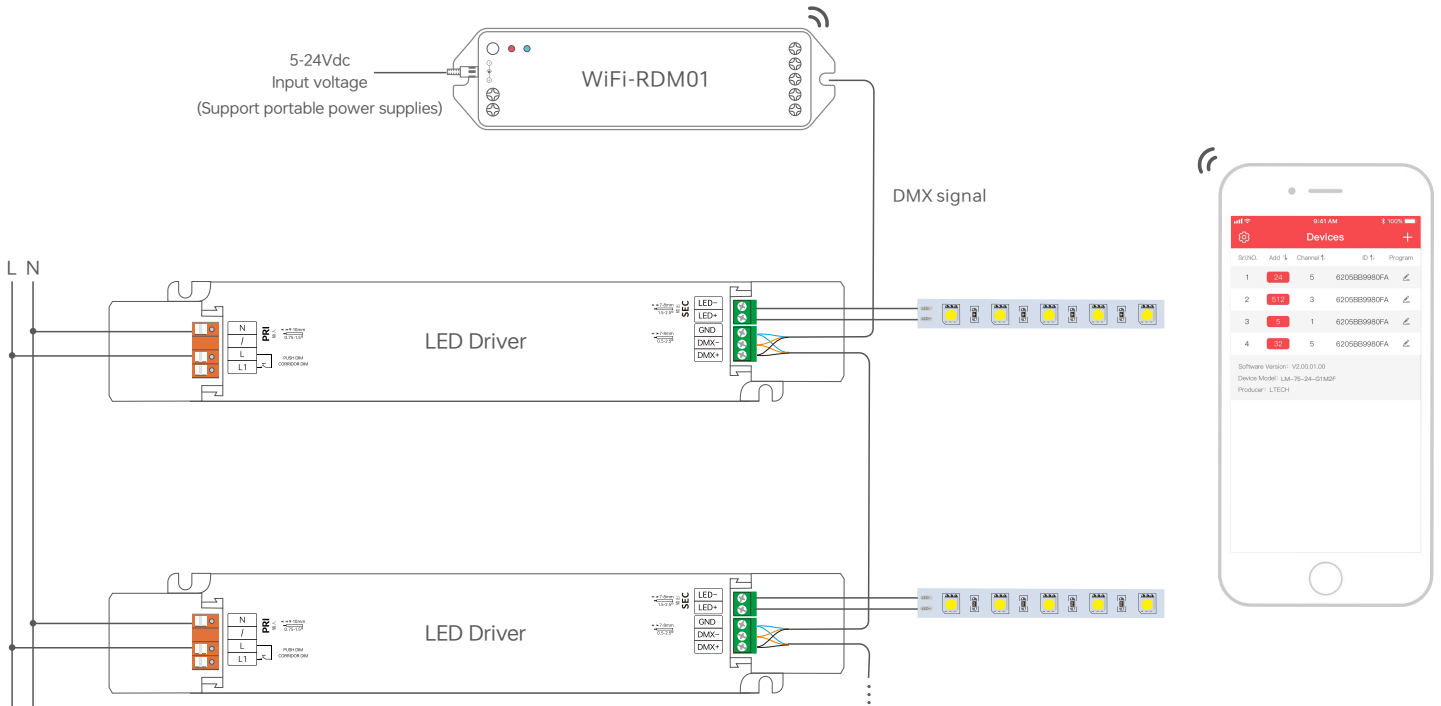


*The default of DMX address of the LED driver is 1

*Power supplies of different models/wattages vary in hardware. Do not use them for dimming the same light film/light box to avoid inconsistent light activation and dimming. Recommend matching the same light film/light box with a power supply of the same model for consistent dimming.

LTECH RDM Programmer APP interface introduction

Download the App with your mobile phone and connect the RDM Programmer successfully, then you are allowed to set parameters through the APP. Please refer to the WiFi-RDM01 manual for more details.

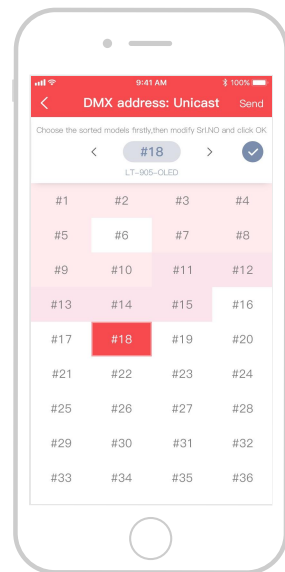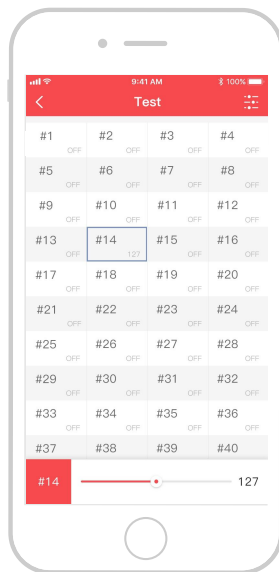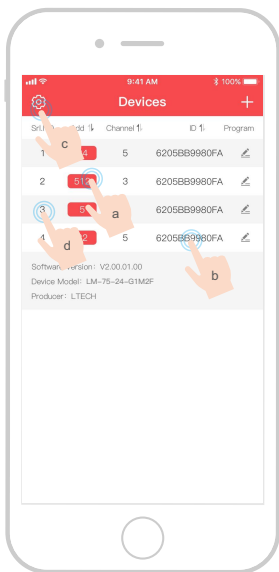

- a : Click "Add", edit the address in corresponding box ;
- b : Click "ID", get more product details ;
- c : Click "⚙️", enter the settings interface
- d : Click "No.", issue the recognizing command.

Testing

DMX address setting

Use the NFC Lighting APP

Scan the QR code below with your mobile phone and follow the prompts to complete the APP installation (According to performance requirements, you need to use a NFC-capable Android phone, or an iPhone 8 and later that are compatible with iOS 13 or higher).




* Before you begin setting the parameters of the driver, please make sure the driver is powered off.

Read/Write the LED driver

Use your NFC-capable phone to read LED driver data, then edit the parameters and they can be directly written to the driver

1. Read the LED driver

On the APP home page, click **[Read/Write LED driver]** , then keep the programmer's sensing area close to the NFC sensing area of the driver to read the driver parameters.




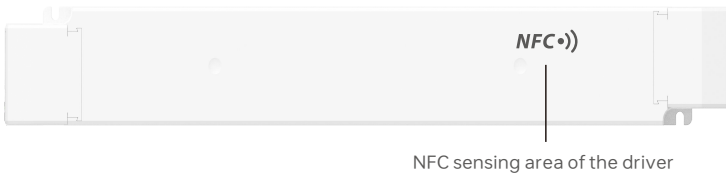


2. Edit parameters

Click on **[Parameter Management]** to edit more advanced parameters such as DMX Address, Dimming Curve, PWM Frequency, Bit Depth, Brightness Range, Time for Fading to Dim Level, Power-on Status System Failure Level, and Corridor Lights.


3. Write to the driver

After completing the parameter settings, click **[Write]** in the upper right corner, and keep the programmer's sensing area close to the NFC sensing area of the driver, so the parameters can be written to the driver

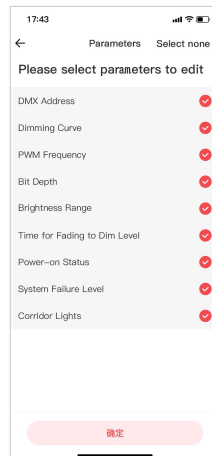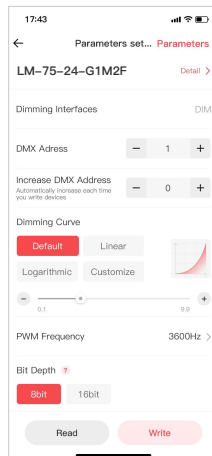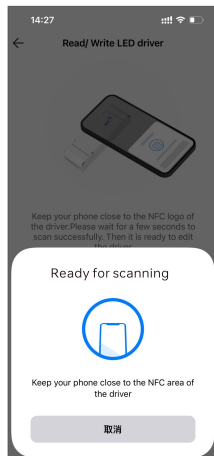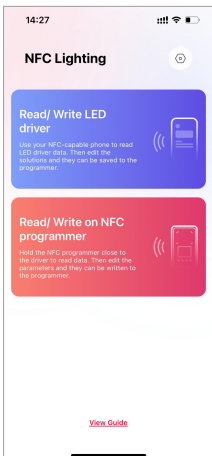


Protective Housing Application Diagram

Tension plate

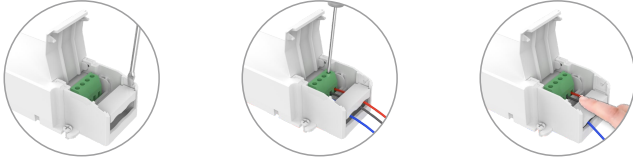


1. Pry up the protecting housing in the side plate position with a tool.
2. Connect to electrical wires with a screwdriver as wiring diagram shows.
3. Press down the tension plate to fix the the electrical wires, then close the protective housing.

Remove the protective housing

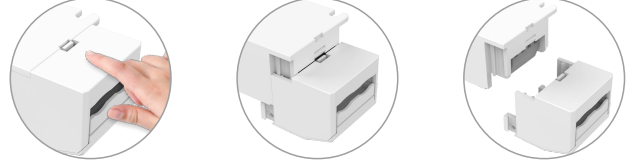


Pull the housing left and right from the bottom to remove it.


Installation Precautions

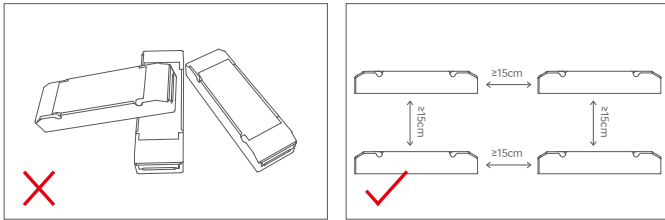

Please do not stack the products. The distance between two products should be $\geq 15\text{cm}$ so as not to affect heat dissipation and the lifespan of the products.




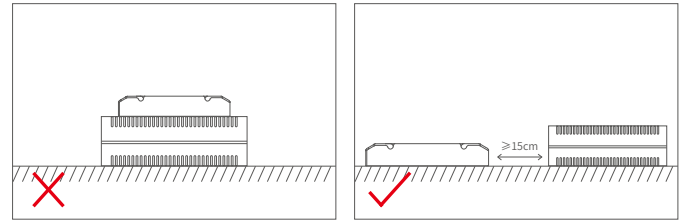


Please not place the products on power supplies. The distance between the product and the power supplies should be $\geq 15\text{cm}$ so as not to affect heat dissipation or shorten the lifetime of the products.




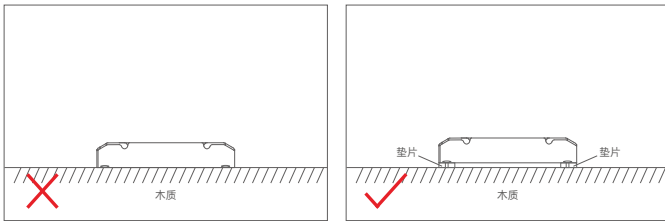


Do not fix the product screws tightly against the wooden board. Instead, add a washer with a thickness of $\geq 7\text{mm}$ under the fixing screws. Leaving some gaps can effectively dissipate heat, preventing any impact on the product's heat dissipation performance and service life.

Relationship Diagrams

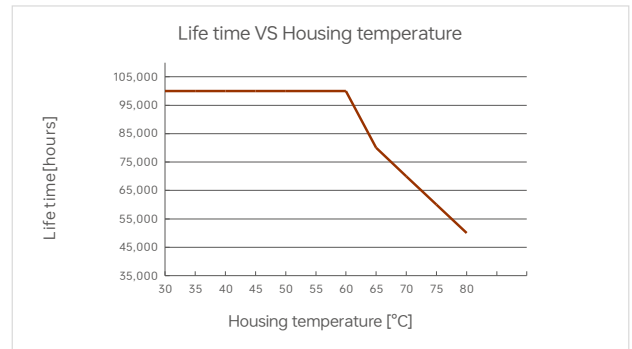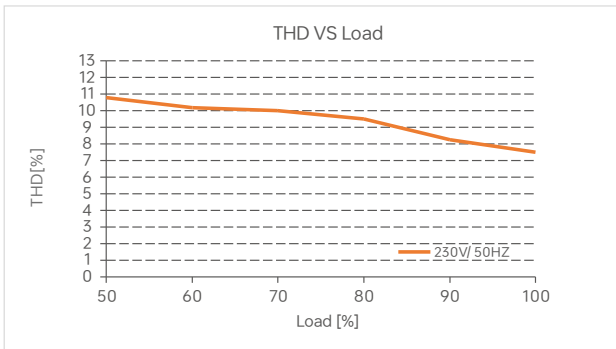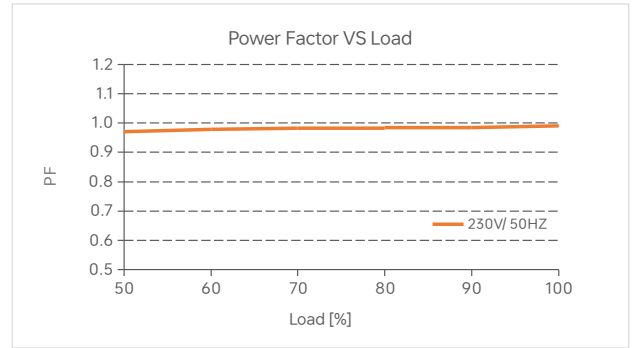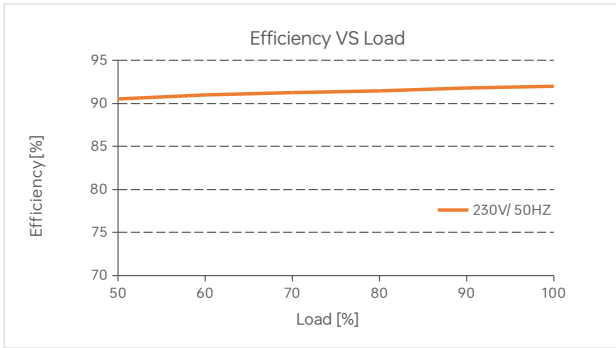

LM-75-24-G1M2F

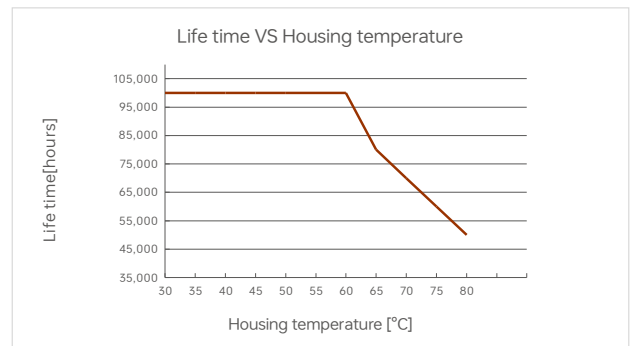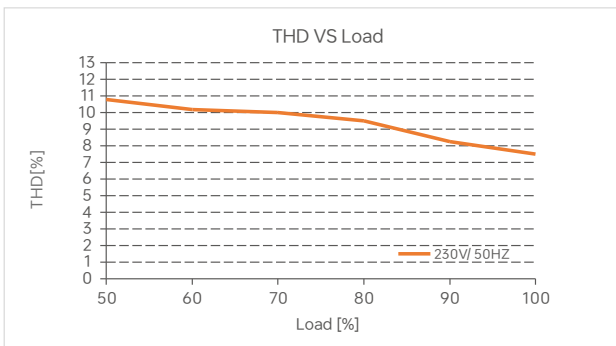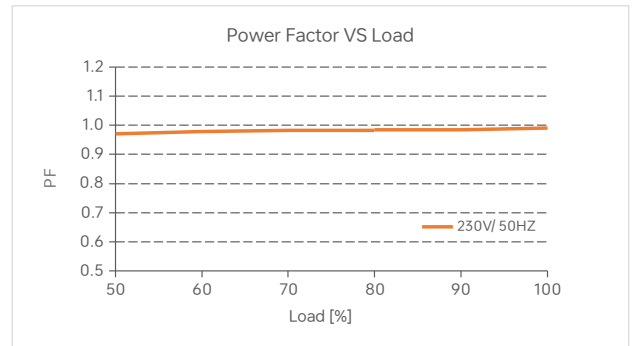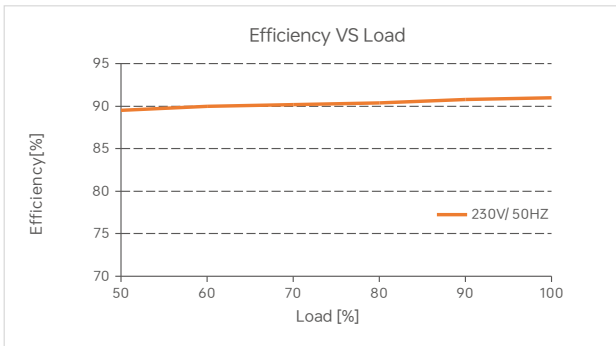

LM-75-12-G1M2F

Surge Current & Corresponding Miniature Circuit Breaker (MCB) Load Capacity Table

MCB Model	B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
Maximum Load Capacity	5	7	8	10	13	8	9	10	12	15	11	12	13	16	19

Remarks:


1. Test Conditions: Cold start 45A(Test twidth=300us tested under 50% Ipeak)/230V ~ .
2. The number of supported drivers may vary depending on the brand and model of the MCB.
- 3.It is recommended not to exceed the specified load capacity during on-site installation. The actual load should be determined based on field conditions.
- 4.If the ambient temperature exceeds 30°C or multiple MCBs are installed side by side, the number of installed drivers must be reduced and recalculated accordingly.
- 5.Electricians typically use Type B MCBs for residential lighting and Type C MCBs for commercial lighting applications.
- 6.Different testing equipment may yield variations in measured current peaks and pulse widths. Always use professional-grade instruments for accurate testing.

Flicker Test Table

Limit Value of Modulation in Low Risk Areas	
Waveform frequency of Optical output (f)	Limit value (%)
$f \leq 8\text{Hz}$	0.2
$8\text{Hz} < f \leq 90\text{Hz}$	$0.025 \times f$
$90\text{Hz} < f \leq 1250\text{Hz}$	$0.08 \times f$
$f > 1250\text{Hz}$	Exemption assessment
Limit Value of Modulation in No Effect Areas	
Waveform frequency of Optical output (f)	Limit value (%)
$f \leq 10\text{Hz}$	0.1
$10\text{Hz} < f \leq 90\text{Hz}$	$0.01 \times f$
$90\text{Hz} < f \leq 3125\text{Hz}$	$(0.08/2.5) \times f$
$f > 3125\text{Hz}$	Exemption assessment (High frequency exemption)

Brightness


- ▲ 0.1%
- ◆ 1%
- ▲ 5%
- ◆ 10%
- 20%
- ▲ 30%
- 40%
- ★ 50%
- 60%
- 70%
- 80%
- ★ 90%
- ◆ 100%

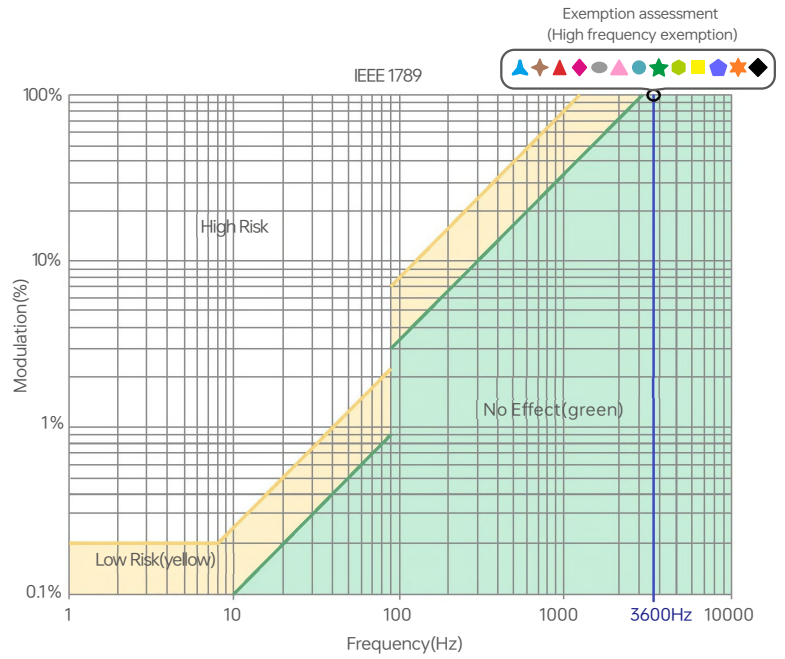

Packaging specification

Model	LM-75-24-G1M2F/LM-75-12-G1M2F
Packaging box size	315×215×240mm(L×W×H)
Quantity	10 PCS per layer, 3 layers per box, 30 PCS per box
Weight	0.29kg per PC, 9.6kg±5% per box

Packaging style drawing

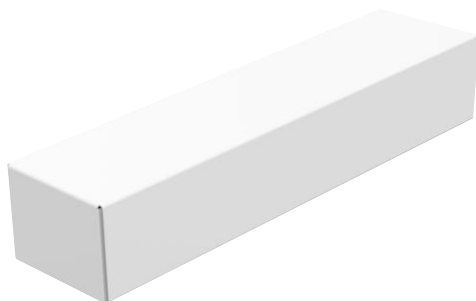

Inner packaging box



Full box packaging

Transportation and Storage

1. Transportation

Products can be shipped via vehicles, boats and planes.

During transportation, products should be protected from rain and sun. Please avoid severe shock and vibration during the loading and unloading process.

2. Storage

The storage conditions should comply with the Class I Environmental Standards. The products that have been stored for more than six months are recommended to be re-inspected and can be used only after they have been qualified.

Attentions

- Product installation and commissioning should be done by a qualified professional.
 - LTECH products are and not lightningproof non-waterproof (special models excepted). Please avoid the sun and rain. When installed outdoors, please ensure they are mounted in a water proof enclosure or in an area equipped with lightning protection devices.
 - Good heat dissipation will prolong the working life of products. Please ensure good ventilation.
 - Please check if the working voltage used complies with the parameter requirements of products.
 - The diameter of wire used must be able to load the light fixtures you connect and ensure the firm wiring.
 - Before you power on products, please make sure all the wiring is correct in case of incorrect connection that causes damage to light fixtures.
 - If a fault occurs, please do not attempt to fix products by yourself. If you have any question, please contact your suppliers.
- * This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

Warranty Agreement

- Warranty periods from the date of delivery: 5 years.
 - Free repair or replacement services for quality problems are provided within warranty periods.
- Warranty exclusions below:
- Beyond warranty periods.
 - Any artificial damage caused by high voltage, overload, or improper operations.
 - Products with severe physical damage.
 - Damage caused by natural disasters and force majeure.
 - Warranty labels and barcodes have been damaged.
 - No any contract signed by LTECH.
1. Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
 2. LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.

LED智能调光驱动器 (恒压型)

- 外壳采用科思创/三星PC阻燃V0级原料
- 免螺丝压线翻盖设计, 可拆卸端盖, 按需调节壳体长度
- 支持全指令NFC极速编程, 可使用手机APP通过NFC更改DMX地址、调光曲线、亮度范围等参数, 实现驱动器数据交互功能
- 支持RDM远程设备管理协议
- 支持DMX512/RDM、PUSH DIM、走廊灯调光
- 调光范围0-100%, LED从0.01%开始调光
- 带软启动渐亮功能, 让人眼视觉更舒适
- 支持线上OTA升级设备固件
- 符合欧盟能效ERP指令, 空载功耗<0.5W, 网络待机功耗<0.5W
- 创新的热管理技术, 智能保护电源寿命
- 过温、过压、过载、短路保护, 可自动恢复
- 适合室内I、II、III类灯具应用
- 常规使用下寿命可达10万小时
- 5年保修期 (采用红宝石电容)



无频闪
IEEE 1789
高频豁免级别

Dimmable:
1: 10000




技术参数

型号	LM-75-24-G1M2F	LM-75-12-G1M2F		
特征	输出类型	恒压		
	调光接口	DMX512/RDM, PUSH DIM		
	输出特征	隔离		
	防护等级	IP20		
输出	绝缘等级	II类(适用于室内I、II、III类灯具)		
	输出电压	24V $\overline{=}$	12V $\overline{=}$	
	输出电压范围	24V \pm 0.5V $\overline{=}$	12V \pm 0.5V $\overline{=}$	
	输出电流	Max. 3.125A	Max. 6.25A	
	输出功率	Max. 75W		
	输出功率范围	0-75W		
	频闪级别	高频豁免考核级别		
	调光范围	0-100%, 调光深度: 0.01%		
	过功率限制	\geq 102%		
输入	纹波与噪声	\leq 300mV	\leq 200mV	
	PWM调光频率	300-22000Hz		
	输入交流电压	220-240V~		
	输入直流电压	220-240V $\overline{=}$ (EMI需配灯具后评估)		
	频率范围	50/60Hz		
	输入电流	Max. 0.4A/230V~		
	功率因数	PF>0.98/230V~(满载)		
	总谐波失真THD	THD<10% @ 230V~ (满载)		
	效率(Typ.)	92%	91%	
	浪涌电流	冷启动45A (在50%peak下测试twidth=300us)/230V~		
抗浪涌	L-N: 2KV			
漏电流	Max. 0.5mA			
环境	工作温度	ta: -20 ~ 50°C tc: 80°C		
	工作湿度	20 ~ 95%RH, 无冷凝		
	储存温度/湿度	-40 ~ 80°C, 10~95%RH		
	温度系数	\pm 0.03%/°C(0-50°C)		
保护	耐震动	10-500HZ, 2G 12分钟/周期, X, Y, Z轴各72分钟		
	过温保护	根据PCB温度超标情况(\geq 110°C), 智能调节电流输出或关闭, 可自动恢复		
	过载保护	负载电流 \geq 102%, 关闭输出, 可自动恢复		
	短路保护	输出线路短路进入打嗝模式, 可自动恢复		
	过压保护	空载电压 \geq 28V, 关闭输出, 可自动恢复	空载电压 \geq 16V, 关闭输出, 可自动恢复	
安规和电磁规格	耐压	输入对输出: 3750V~		
	绝缘阻抗	输入对输出: 100M Ω /500VDC/25°C/70%RH		
	安全规范	CCC	中国	GB19510.1, GB19510.14, GB19510.213
		TUV	德国	EN61347-1, EN61347-2-13, EN62493
		CB	CB成员国	IEC61347-1, IEC61347-2-13
		CE	欧盟	EN61347-1, EN61347-2-13, EN62384
		EAC	俄罗斯	IEC61347-1, IEC61347-2-13
		RCM	澳洲	AS 61347-1, AS 61347-2-13
	电磁兼容发射	ENEC	欧洲	EN61347-1, EN61347-2-13, EN62384
		CCC	中国	GB/T17743, GB17625.1
CE		欧盟	EN55015, EN61000-3-2, EN61000-3-3, EN61547	
EAC		俄罗斯	IEC62493, IEC61547, EH55015	
RCM	澳洲	EN55015, EN61000-3-2, EN61000-3-3, EN61547		
电磁兼容抗扰度	EN61000-4-2,3,4,5,6,8,11,EN61547			
ErP	功耗	网络待机功耗	< 0.5W (通过指令开关后)	
		空载功耗	< 0.5W (不接灯具时)	
	频闪/频闪效应	IEEE1789	满足无影响/高频豁免考核级别	
其他	CIE SVM	PstLM \leq 1.0, SVM \leq 0.4		
	DF	相位因素	DF \geq 0.9	
其他	产品重量	290g \pm 10g		
	产品尺寸	293 \times 43 \times 30mm(L \times W \times H)		

本款驱动器适合连接电阻限流的LED灯具(如LED灯条)。如果连接内置恒流IC限流的灯具, 会产生几十倍的瞬间浪涌电流, 导致驱动器会执行过载保护(打嗝频闪)。下单时这类内置恒流IC限流的灯具需要注明(如MR16灯杯、地埋灯、洗墙灯、恒流硬灯条等), 以便烧写特殊程序。


尺寸图

单位: mm

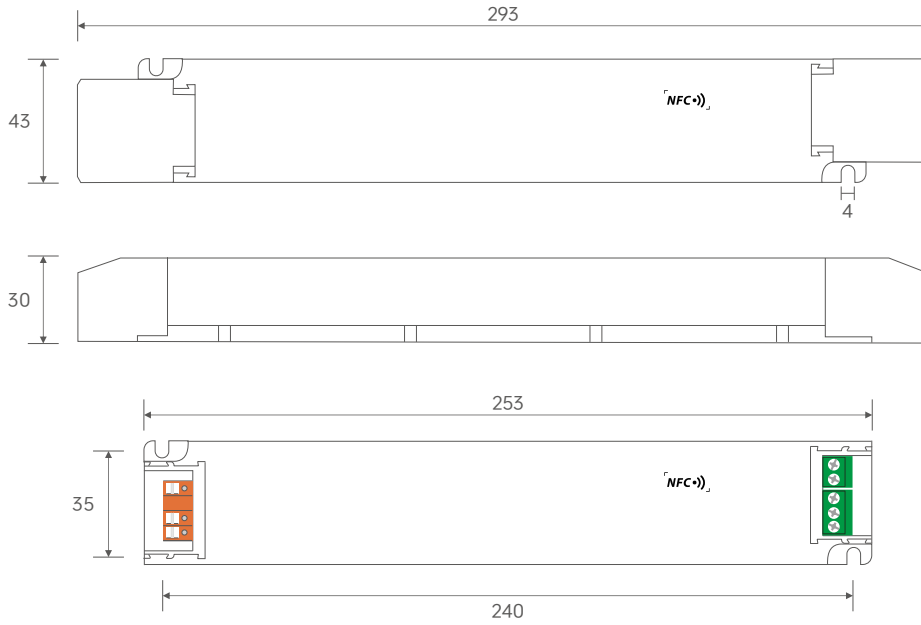


连接应用图

DMX512/RDM 连接方式

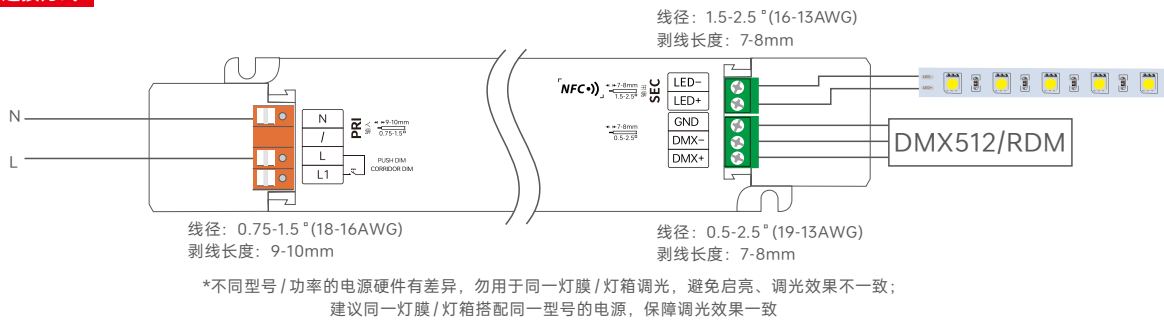

PUSH DIM 连接方式

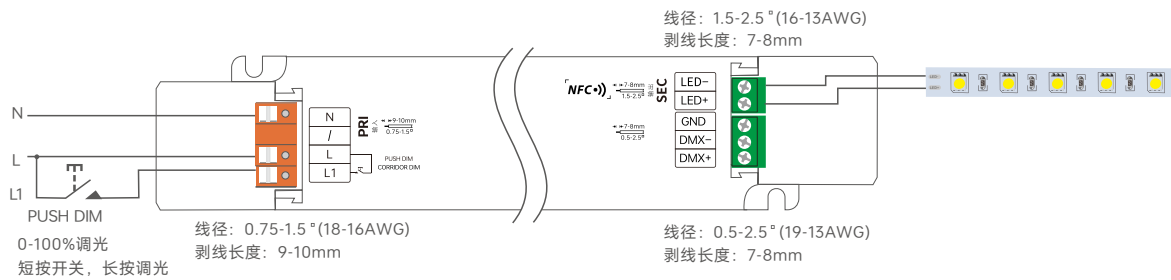

*调光接口优先级为: 首先DMX512/RDM, 然后PUSH DIM。
仅当系统失效状态设置, 设置为“记忆”时, 并且没有收到DMX数据, 才能允许其切换到按键调光。
*系统失效状态可通过NFC lighting/WiFi-RDM进行设置。
*不同型号 / 功率的电源硬件有差异, 勿用于同一灯膜 / 灯箱调光, 避免启亮、调光效果不一致;
建议同一灯膜 / 灯箱搭配同一型号的电源, 保障调光效果一致

切换至PUSH DIM调光模式

方式 1: 若是已切换至走廊灯模式, 可以按照PUSH DIM接线图接好线路, 复位开关 3 秒内短按 5 次, 然后长按 6 秒后再 3 秒内短按 5 次, 驱动器将会自动切换至PUSH DIM调光模式。
方式 2: 若是已切换至走廊灯模式, 可以通过NFC Lighting app切换成 PUSH DIM调光模式。


操作说明



复位开关

- 短按: 开/关控制
- 双击: 无
- 长按: 调节当前亮度
- 调光记忆: 当再次开关时, 灯光会回到先前调整的亮度水平

走廊灯 连接方式

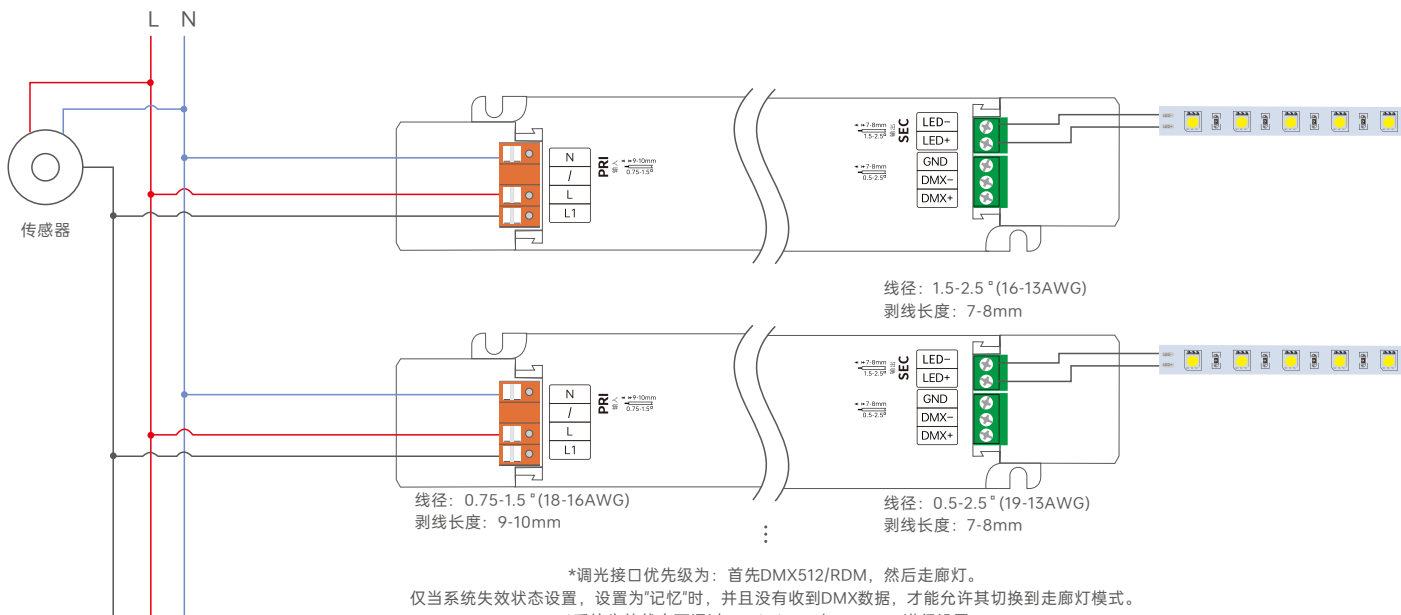


*调光接口优先级为: 首先DMX512/RDM, 然后走廊灯。
 仅当系统失效状态设置, 设置为"记忆"时, 并且没有收到DMX数据, 才能允许其切换到走廊灯模式。
 *系统失效状态可通过NFC lighting/WiFi-RDM进行设置。
 *不同型号/功率的电源硬件有差异, 勿用于同一灯膜/灯箱调光, 避免启亮、调光效果不一致;
 建议同一灯膜/灯箱搭配同一型号的电源, 保障调光效果一致


切换至走廊灯模式

- 方式 1: 通过NFC配置并切换走廊灯功能, PUSH DIM功能关闭。
 - 方式 2: 按照走廊调光接线图接好线后, 保持有效感应区域内移动并持续2分钟以上, 自动切换成走廊调光模式并全亮灯。
 - 方式 3: 按照走廊调光接线图接好线后, 先将传感器更换为普通开关, 然后打开普通开关持续导通2分钟, 驱动器将自动切换到走廊调光模式, 然后将普通开关移除并更换回传感器。
- 备注: 正常工作时, 推荐将移动感应器的维持时间(Hold-time)设置为最小。
 需要选用带AC开关的移动感应器。

走廊调光 工作过程

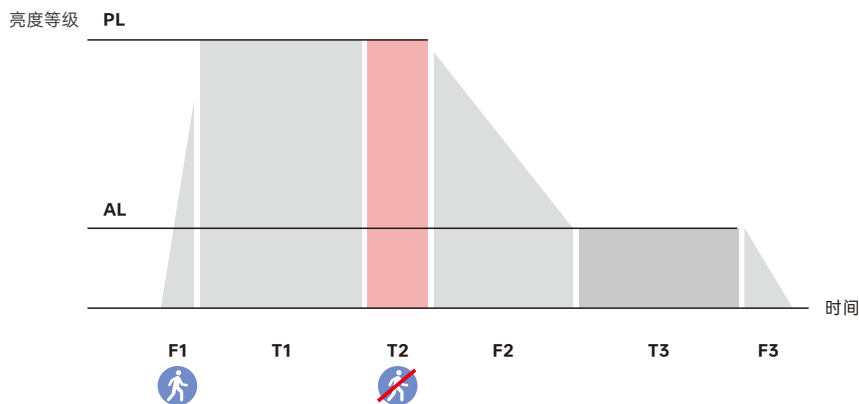

名称	默认	设置范围
(F1) 感应渐入时间	1 秒	0-100 秒
(PL) 感应亮度	255	0-255
(T1) 感应保持时间	通过传感器设置	
(T2) 感应延迟时间	30 秒	0 秒, 5 秒, 10 秒, 20 秒, 30 秒, 45 秒, 1 分钟, 2 分钟, 3 分钟, 5 分钟, 10 分钟, 20 分钟, 30 分钟
(F2) 无感应渐出时间	1 秒	0-100 秒
(AL) 无人守候亮度	100	0-255
(T3) 守候时间	30 秒	0 秒, 5 秒, 10 秒, 20 秒, 30 秒, 45 秒, 1 分钟, 2 分钟, 3 分钟, 5 分钟, 10 分钟, 20 分钟, 30 分钟, 永久
(F3) 渐出到关闭时间	1 秒	0-100 秒

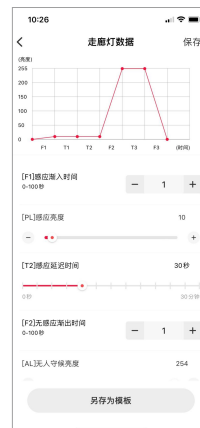


备注: *如灯需要低亮度守候, 需要设置[T3]感应守候时间为永久
 *以上参数由NFC lighting APP 设置

DMX地址设置

DMX电源可以与遵从标准RDM协议的地址编辑器配合使用。

建议使用LTECH的RDM编辑器（型号WiFi-RDM01），可实现手机远程浏览与设置参数等更多功能，连接图如下：



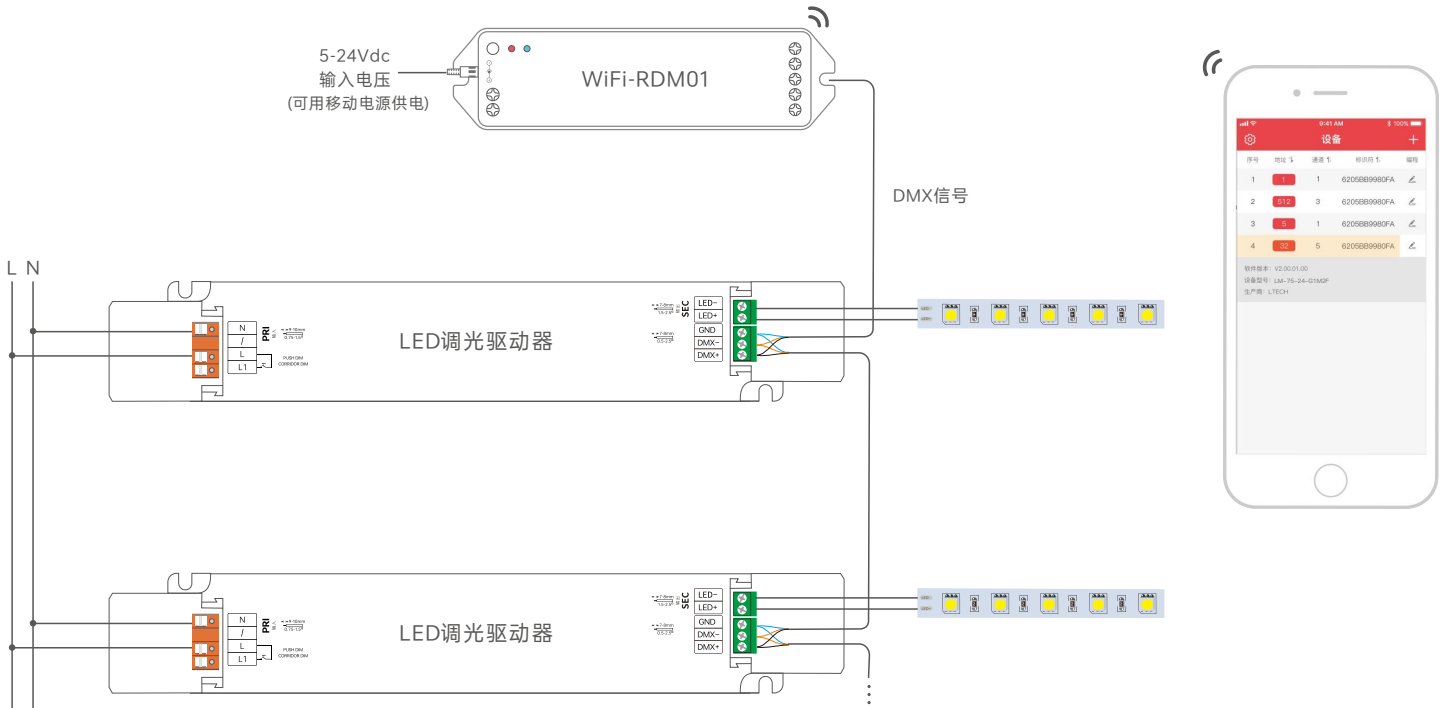


*电源出厂DMX地址默认为1

*不同型号 / 功率的电源硬件有差异，勿用于同一灯膜 / 灯箱调光，避免启亮、调光效果不一致；
建议同一灯膜 / 灯箱搭配同一型号的电源，保障调光效果一致。

LTECH RDM编程器APP界面介绍

手机下载APP，与RDM编辑器连接成功后，即可通过APP设置参数，具体请参看WiFi-RDM01的使用说明书。

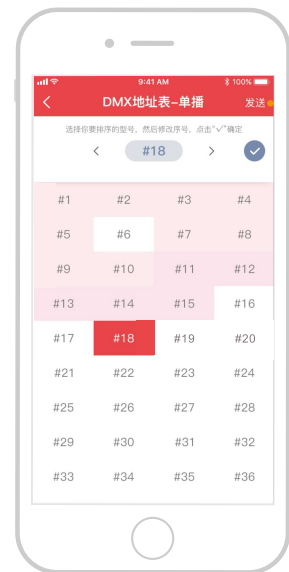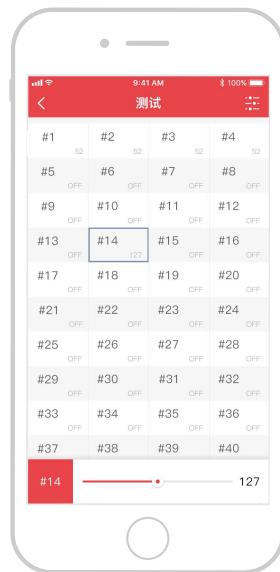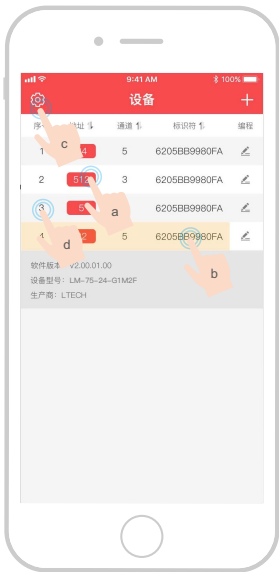

- a: 点击“地址”对应方框可编辑地址；
- b: 点击“标识符”出现产品详细信息；
- c: 点击⚙️按钮，进入设置界面；
- d: 点击序号发出识别命令。

测试

DMX地址设置

搭配 NFC Lighting APP 使用

通过手机扫描下方二维码，按提示完成APP安装。

(因性能需求，要求手机型号苹果：iPhone 8及以上、且操作系统iOS13及以上； 安卓：具备NFC功能机型)




* 设置驱动器参数时，必须在驱动器断电情况下进行操作。

读/写智能电源

使用手机，通过NFC读取驱动器信息，根据需求设置参数后，可直接写入驱动器。

1. 读取驱动器

在APP“首页”点击【读/写智能电源】，将手机感应区域靠近驱动器NFC感应区，读取驱动器参数。

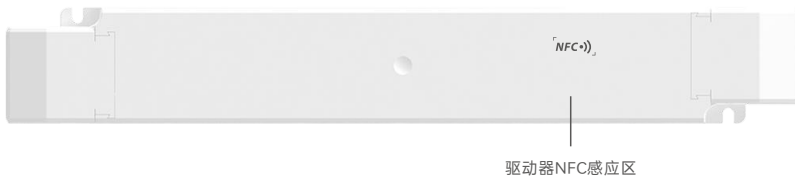

2. 编辑参数

点击【参数管理】可编辑DMX地址、调光曲线、PWM频率、位深度、亮度范围、调光渐变时间、通电状态、系统失效状态、走廊灯等参数。


3. 写入驱动器

参数设置完成后，点击右上角【写入】，将手机感应区域靠近驱动器NFC感应区，即可写入驱动器成功修改参数。




保护盖应用图


压线板

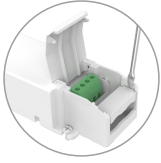

1. 使用工具撬起压线板侧边即可拆下。

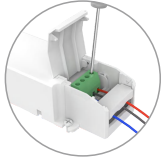

2. 使用螺丝批按照接线图接线。


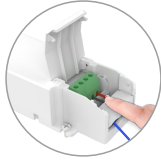


3. 向下按压压线板固定住线，合上保护盖即可。


保护盖的拆装





在底部左右掰动，即可将保护盖拆下。

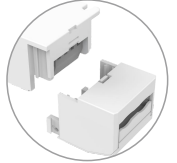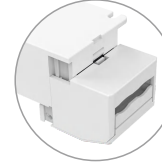



安装注意事项

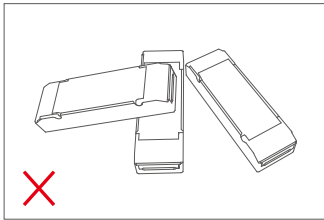


请勿将产品堆叠摆放，产品与产品间隔距离应 $\geq 15\text{cm}$ ，避免影响产品散热和使用寿命。

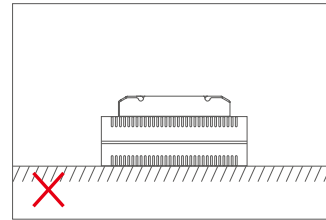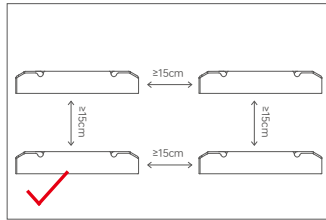





请勿将产品置于电源上方，与电源间隔距离应 $\geq 15\text{cm}$ ，避免影响产品散热而减少使用寿命。

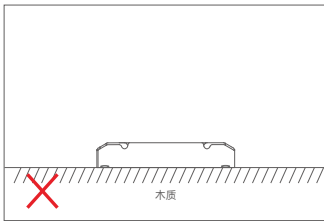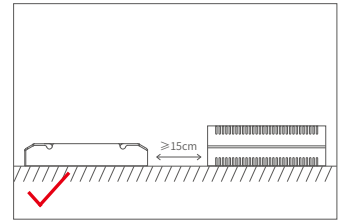





请勿将产品螺丝固定紧贴于木板，应在固定螺丝下增加 $\geq 7\text{mm}$ 的垫片，留点空隙可以有效散热，避免影响产品散热和使用寿命。

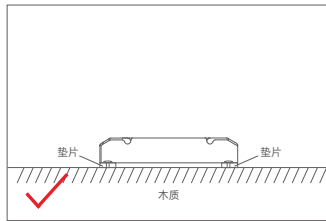

关系图表

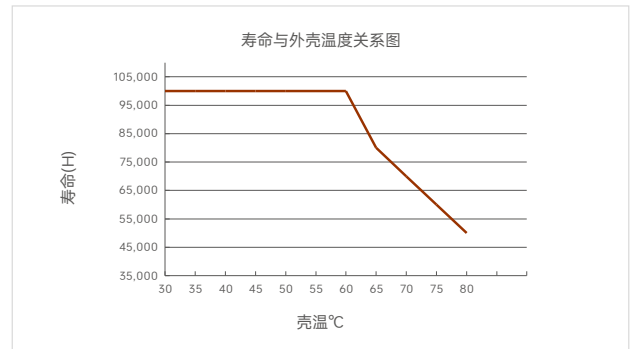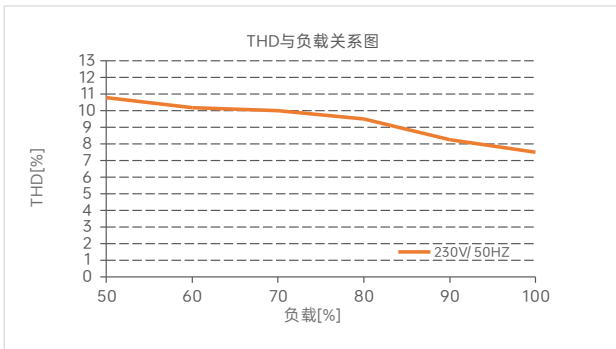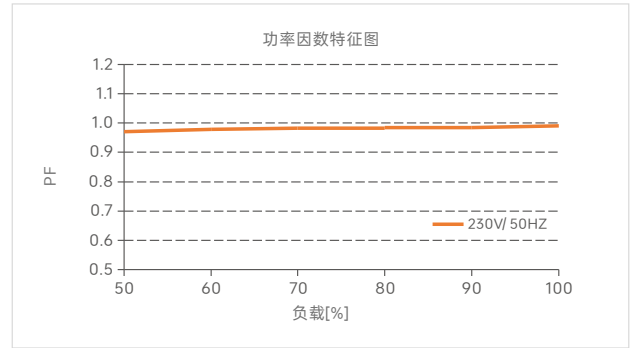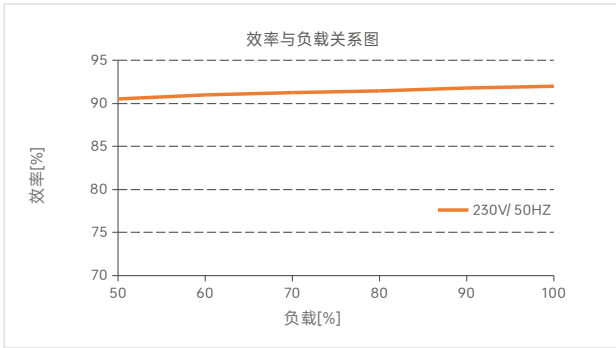

LM-75-24-G1M2F

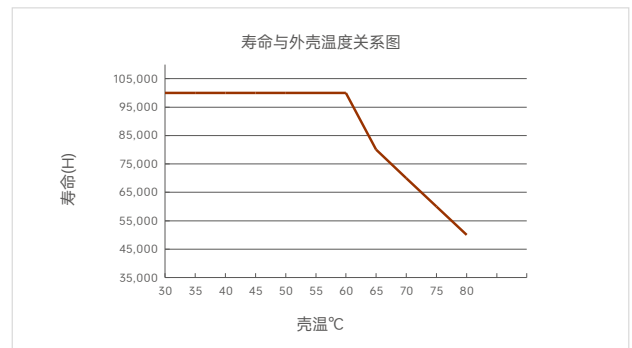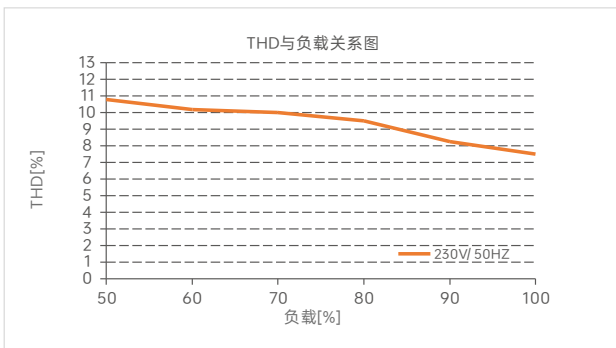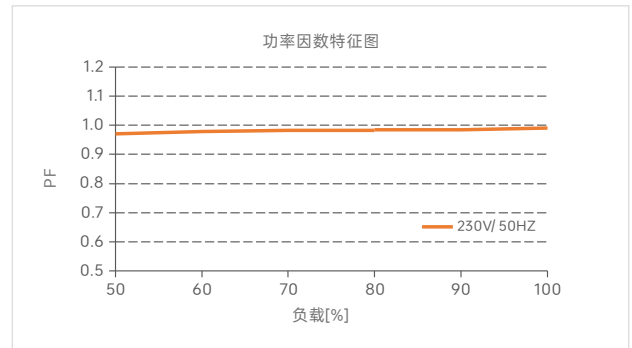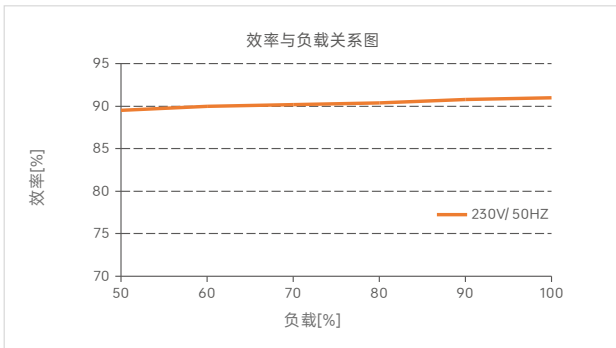

LM-75-12-G1M2F

浪涌电流&对应的微型断路器(MCB)下挂载的数量对应表

微型断路器型号	B10	B13	B16	B20	B25	C10	C13	C16	C20	C25	D10	D13	D16	D20	D25
最大带载数量	5	7	8	10	13	8	9	10	12	15	11	12	13	16	19

备注:


1. 本数据测试条件: 冷启动, 45A(在50%peak下测试twidth=300us)/230V~;
2. 对于不同品牌和型号的微型断路器, 驱动器的数量会有所不同;
3. 现场安装时建议不要超过上述数量, 具体负载量以现场安装为准;
4. 当微型断路器的安装环境温度超过30°C或多个微型断路器并排安装时, 安装的驱动器数量将减少, 这需要重新计算;
5. 电工通常考虑将B型MCB用于家用照明, 将C型MCB用于商业照明;
6. 不同仪器设备测试出来的电流峰值和脉冲宽度有差异, 请使用专业仪器设备测试;

频闪测试表

IEEE 1789

低风险区域 (Low Risk) 的波动深度 (Modulation) 限值	
光输出波形频率 f	限值 (%)
$f \leq 8\text{Hz}$	0.2
$8\text{Hz} < f \leq 90\text{Hz}$	$0.025 \times f$
$90\text{Hz} < f \leq 1250\text{Hz}$	$0.08 \times f$
$f > 1250\text{Hz}$	免除考核
无风险区域 (No Effect) 的波动深度 (Modulation) 限值	
光输出波形频率 f	限值 (%)
$f \leq 10\text{Hz}$	0.1
$10\text{Hz} < f \leq 90\text{Hz}$	$0.01 \times f$
$90\text{Hz} < f \leq 3125\text{Hz}$	$(0.08/2.5) \times f$
$f > 3125\text{Hz}$	免除考核 (高频豁免)


- 亮度
- ▲ 0.1%
 - ◆ 1%
 - ▲ 5%
 - ◆ 10%
 - 20%
 - ▲ 30%
 - 40%
 - ★ 50%
 - 60%
 - 70%
 - 80%
 - ★ 90%
 - ◆ 100%

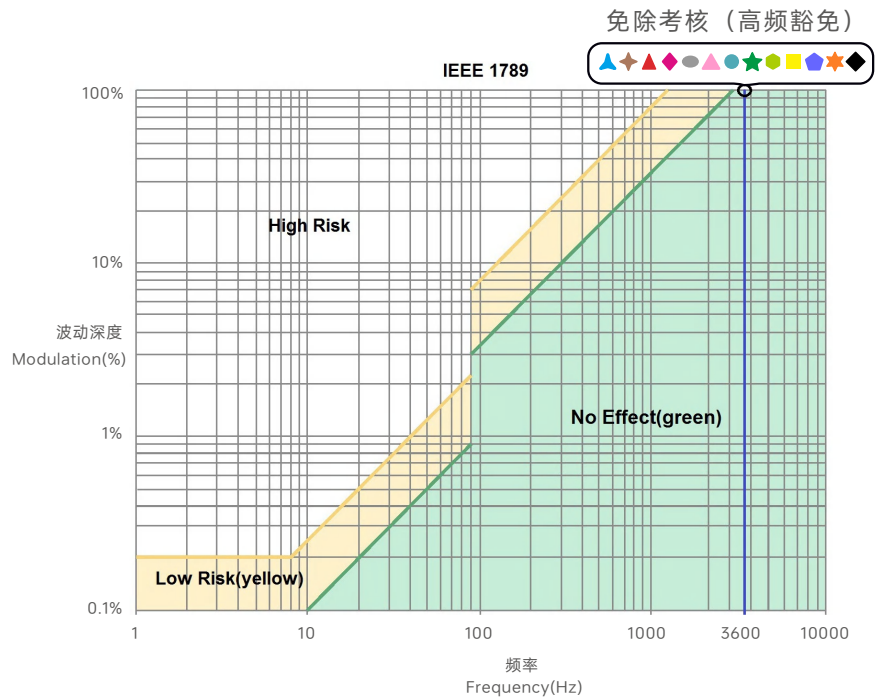

包装规格

型号	LM-75-24-G1M2F、LM-75-12-G1M2F
包装箱尺寸	315×215×240mm(L×W×H)
数量	10个/层; 3层/箱; 30个/箱
重量	0.29kg/个; 9.6kg±5%/箱

包装样式图

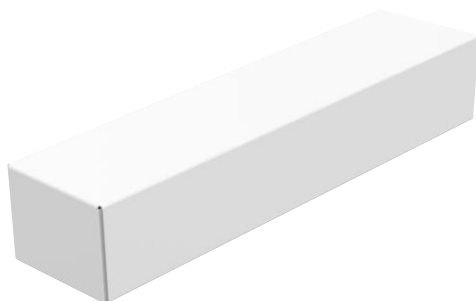

内包装盒



整箱包装

运输和贮存

1. 运输

产品适用车、船、飞机交通运输工具运输。

在运输中，应使用遮篷进行防雨和防晒，并保持文明装卸，不应有剧烈振动、撞击等。

2. 贮存

贮存符合I类环境的规定。贮存期限超过6个月的产品建议重新检验，合格后方可使用。

注意事项

- 请由具有专业资格的人员进行调试安装；
- 雷特产品(专有型号除外)不能防水,需避免日晒雨淋,如安装在户外,请用防水箱和防雷装置;
- 良好的散热条件会延长产品的使用寿命,请把产品安装在通风良好的环境;
- 请检查使用的工作电压是否符合产品的参数要求;
- 使用的电线直径大小必须能够负载连接的LED灯具,并确保接线牢固;
- 通电调试前,应确保所有接线正确,以避免因接线错误而导致灯具损坏;
- 如果发生故障,请勿私自维修;如有疑问,请联系供应商。

* 本说明书的内容如有变更,恕不另行通知。若内容与您使用的功能有所不同,则以实物为准。如有疑问,欢迎向我司授权的经销商咨询。

保修条例

- 自出厂之日起保修服务期为5年。
- 在保修服务期内出现产品质量问题雷特将给予免费修理或更换服务。

非保修条例:

属下列情况不在免费保修或更换服务范围之内:

- 已经超出保修服务期;
- 过高电压、超负载、操作不当等人为造成的损坏;
- 产品外形严重损坏或变形;
- 自然灾害以及人力不可抗拒原因造成的损坏;
- 产品保修标签和产品唯一条形码损坏;
- 无雷特科技签订的合同或发票凭证。

1. 修理或更换是雷特科技对客户的一补救措施。雷特科技不承担任何附带引起的损害赔偿责任,除非在适用法律范围之内。
2. 雷特科技享有修正或调整本保修条款的权利,并以书面形式发布为准。